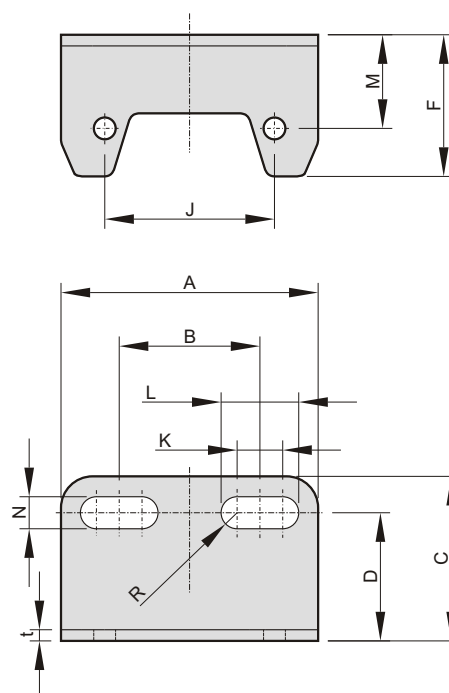


PF/PL安裝架


PF/PL bracket


 B □ 40

Type	A	B	C	D	F	H	J	K	L	M	N	R	t	安裝螺絲 Bolt for assembly	適用機種 Applicable model
B240	45	23	35.5	27	18.8	4.5	26	8	13.4	14	5.4	2.7	2.3	M4×8L(十字)	PF2000, PL2000
B340	53	29	39	32	22.5	4.5	35	6	12.5	19	6.5	3.25	2.3	M4×8L(十字)	PF3000, PL3000
B540	70	54	47	38	28	5.5	47	12	20.5	20	8.5	4.25	2.3	M5×10L(十字)	PF4000, PL4000

PR/PW安裝架

PR/PW bracket

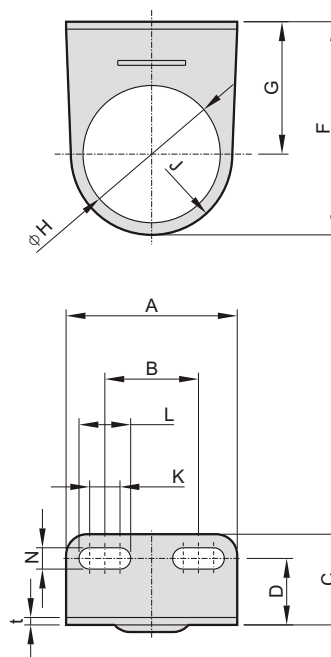
 W-bracket

Type	A	B	C	D	F	G	H	J	K	L	N	R	t	適用機種 Applicable model
W335	45	26	25.5	19	52	30	33	22	8	13.4	5.4	2.7	2.3	PR2000, PRL2000, PRN2000, PW2000
W423	53	34	22.5	15	68.5	41	42	27.5	6	12.5	6.5	3.25	2.3	PR3000(C), PW3000
W522	70	42	27.5	18.5	80	50	42	30	12	20.5	8.5	4.25	2.3	PR4000(C), PW4000